

How to move Premier Rail



**BARRIERS
AUSTRALIA**

Moving the rail out.



The green pin
secures the tee to
the post and is
easily removed.



Remove the pin to
remove the rail and
the tee from the
post.



Remove the rail
from the post.
Remove the post
from the ground
fixing.



The rail can be
used as your line.
Place the ground
plate in the correct
position.



Install the ground plate with the Barriers tool using a hydraulic jack hammer. The boot remains attached to the ground plate.



Ready to install



Check to ensure the pin at the back of the boot is secure. This holds the boot in place to the ground plate.



Use the Barriers
tool to secure the
PVC rivet to the
ground plate.



Rivet secured.



Place post into
ground plate ready
to lift rail onto
posts.



Lift rail with tee to
post. Use the
green pin to secure
tee to post.



Rail moved into
correct position.

